COOKTOP PARTS

For Model: GS445LEMS4
(Black Stainless)

30" GAS FREESTANDING
SELF CLEAN RANGE
SEALED BURNER

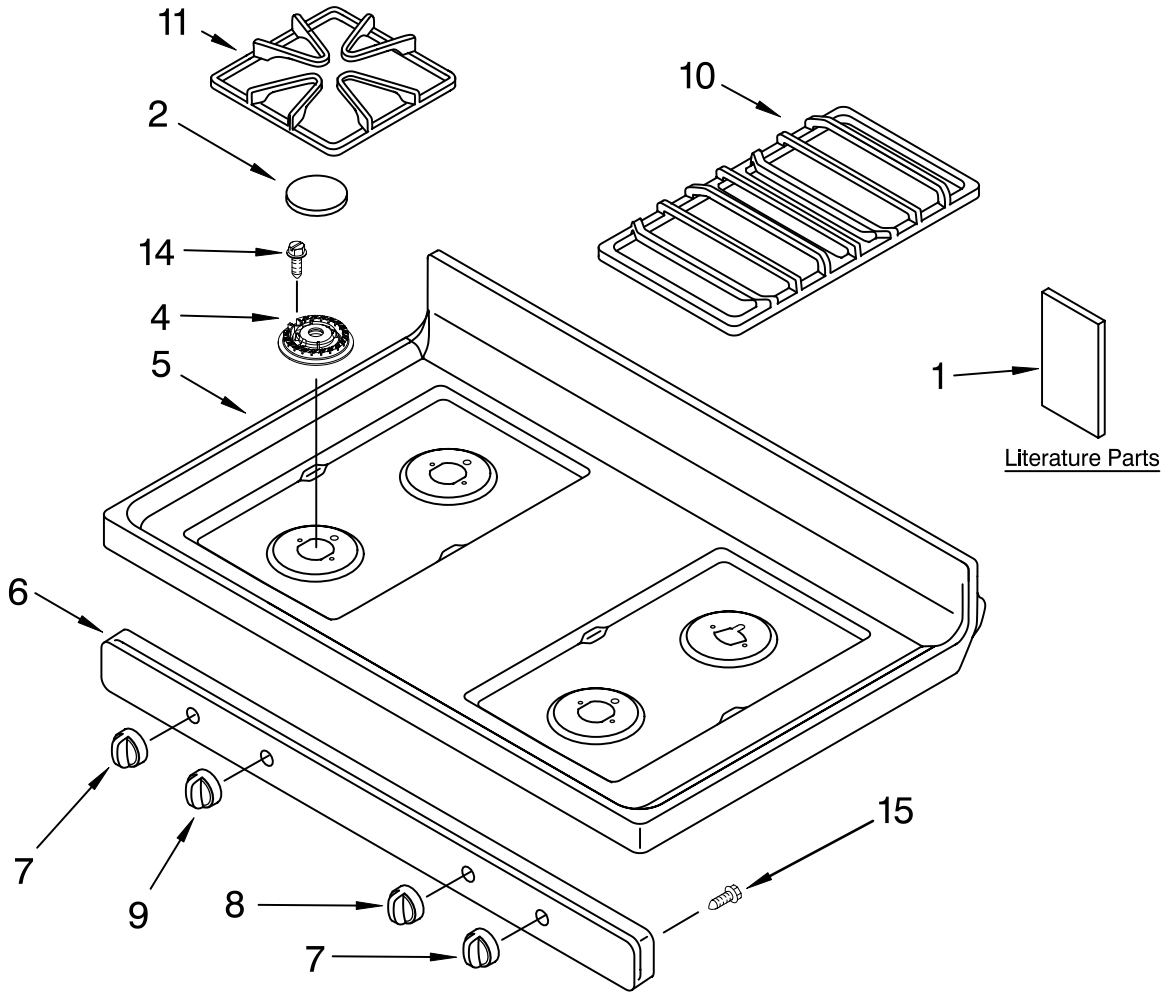

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9762363	Guide, Use & Care
	9758087	Tech Sheet
	9758657	Installation Instructions Anti−Tip Template
	9757142	English/Spanish
	9757143	English/French
	3191638	Safer Cooking Tips
2		Cap, Burner
	3191904	LF
	3191901	LR − RF
	3191898	RR
4		Burner
	4455981	LF
	4455980	LR − RF
	4455979	RR
5	8272253	Cooktop
6	8523855	Panel, Manifold
7	8273279	Knob, Control (2)
8	8273280	Knob, Accusimmer
9	8273281	Knob, Powerburner
10	8522846	Grate, Center
11	8522851	Grate, Burner (4)
14	3400701	Screw
15	3196557	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: GS445LEMS4
(Black Stainless)

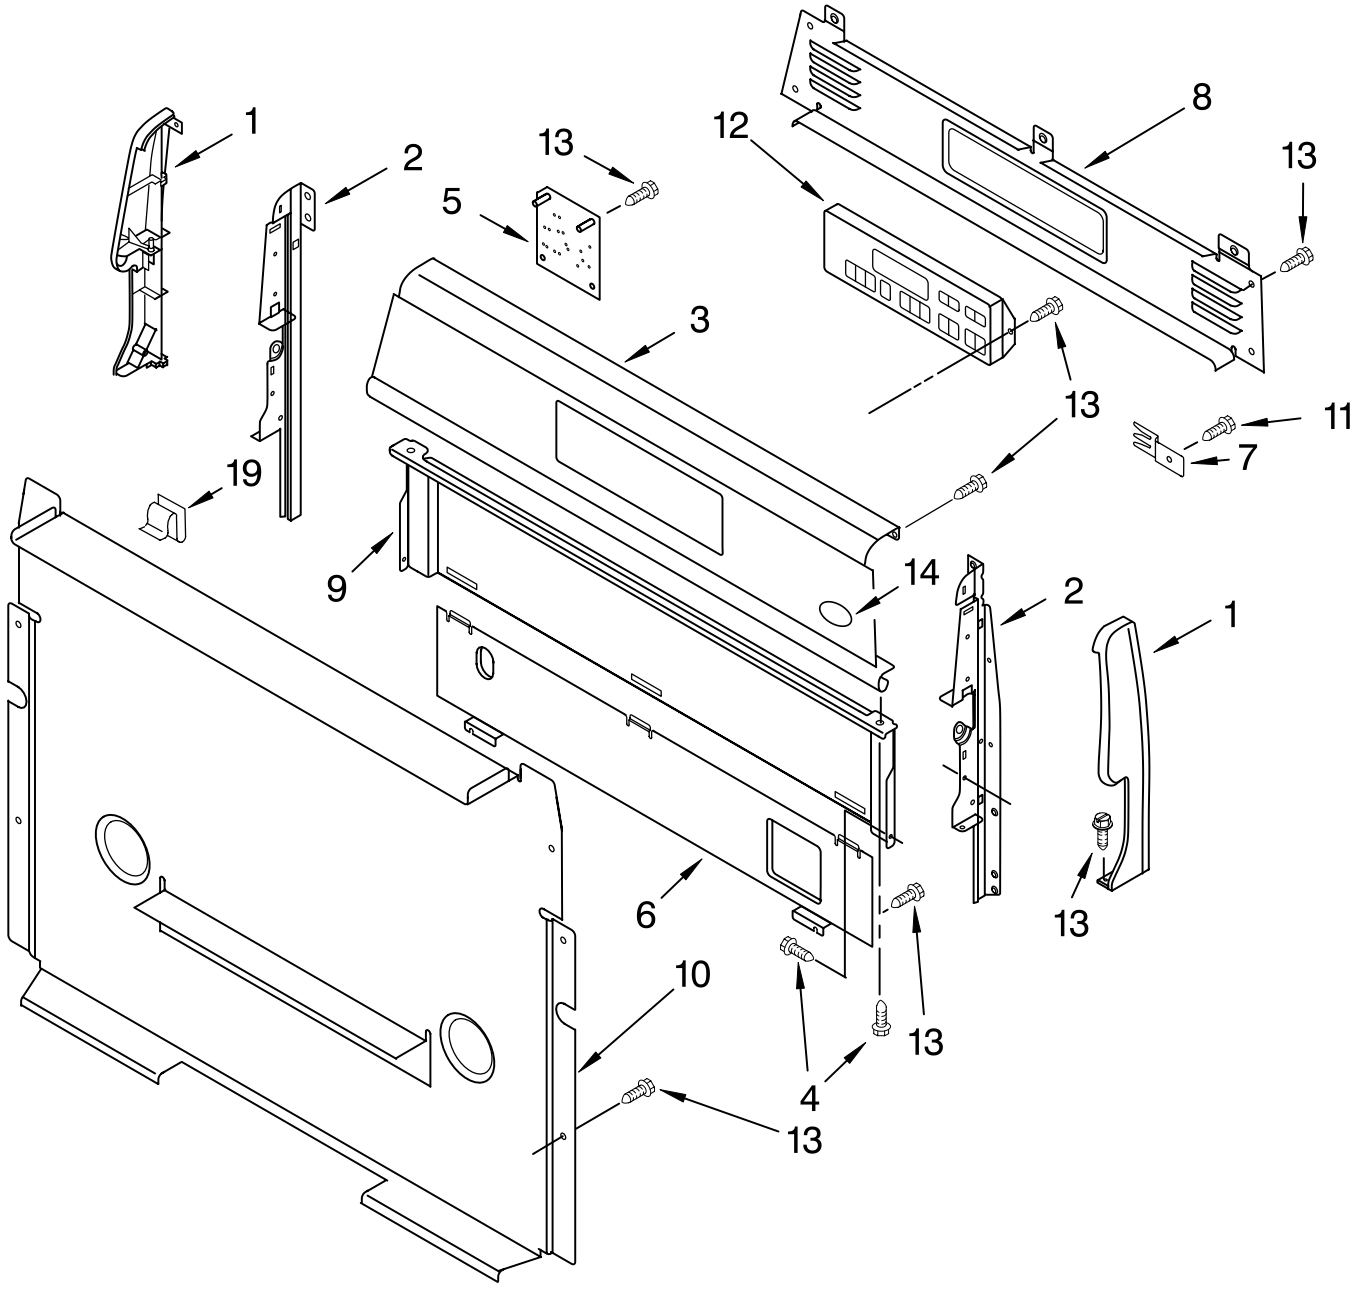

Illus. No.	Part No.	DESCRIPTION
1	3186188	Endcap, Left Hand
	3186189	Endcap, Right Hand
2		Support, Endcap
	8523408	Left Hand
	8523409	Right Hand
3	8524105	Panel, Control
4	4449746	Screw
5	9758080	Module, Spark
6	8053505	Shield, Lower Heat
7	8523412	Bracket, Support
8	9756301	Cover, Upper
9	8053910	Shield, Heat
10	8273132	Cover, Lower
11	3196169	Screw
12	8524252	Control, Range
13	3196178	Screw
14	8523552	Badge Assembly
19	8273564	Clip

MANIFOLD PARTS

For Model: GS445LEMS4
(Black Stainless)

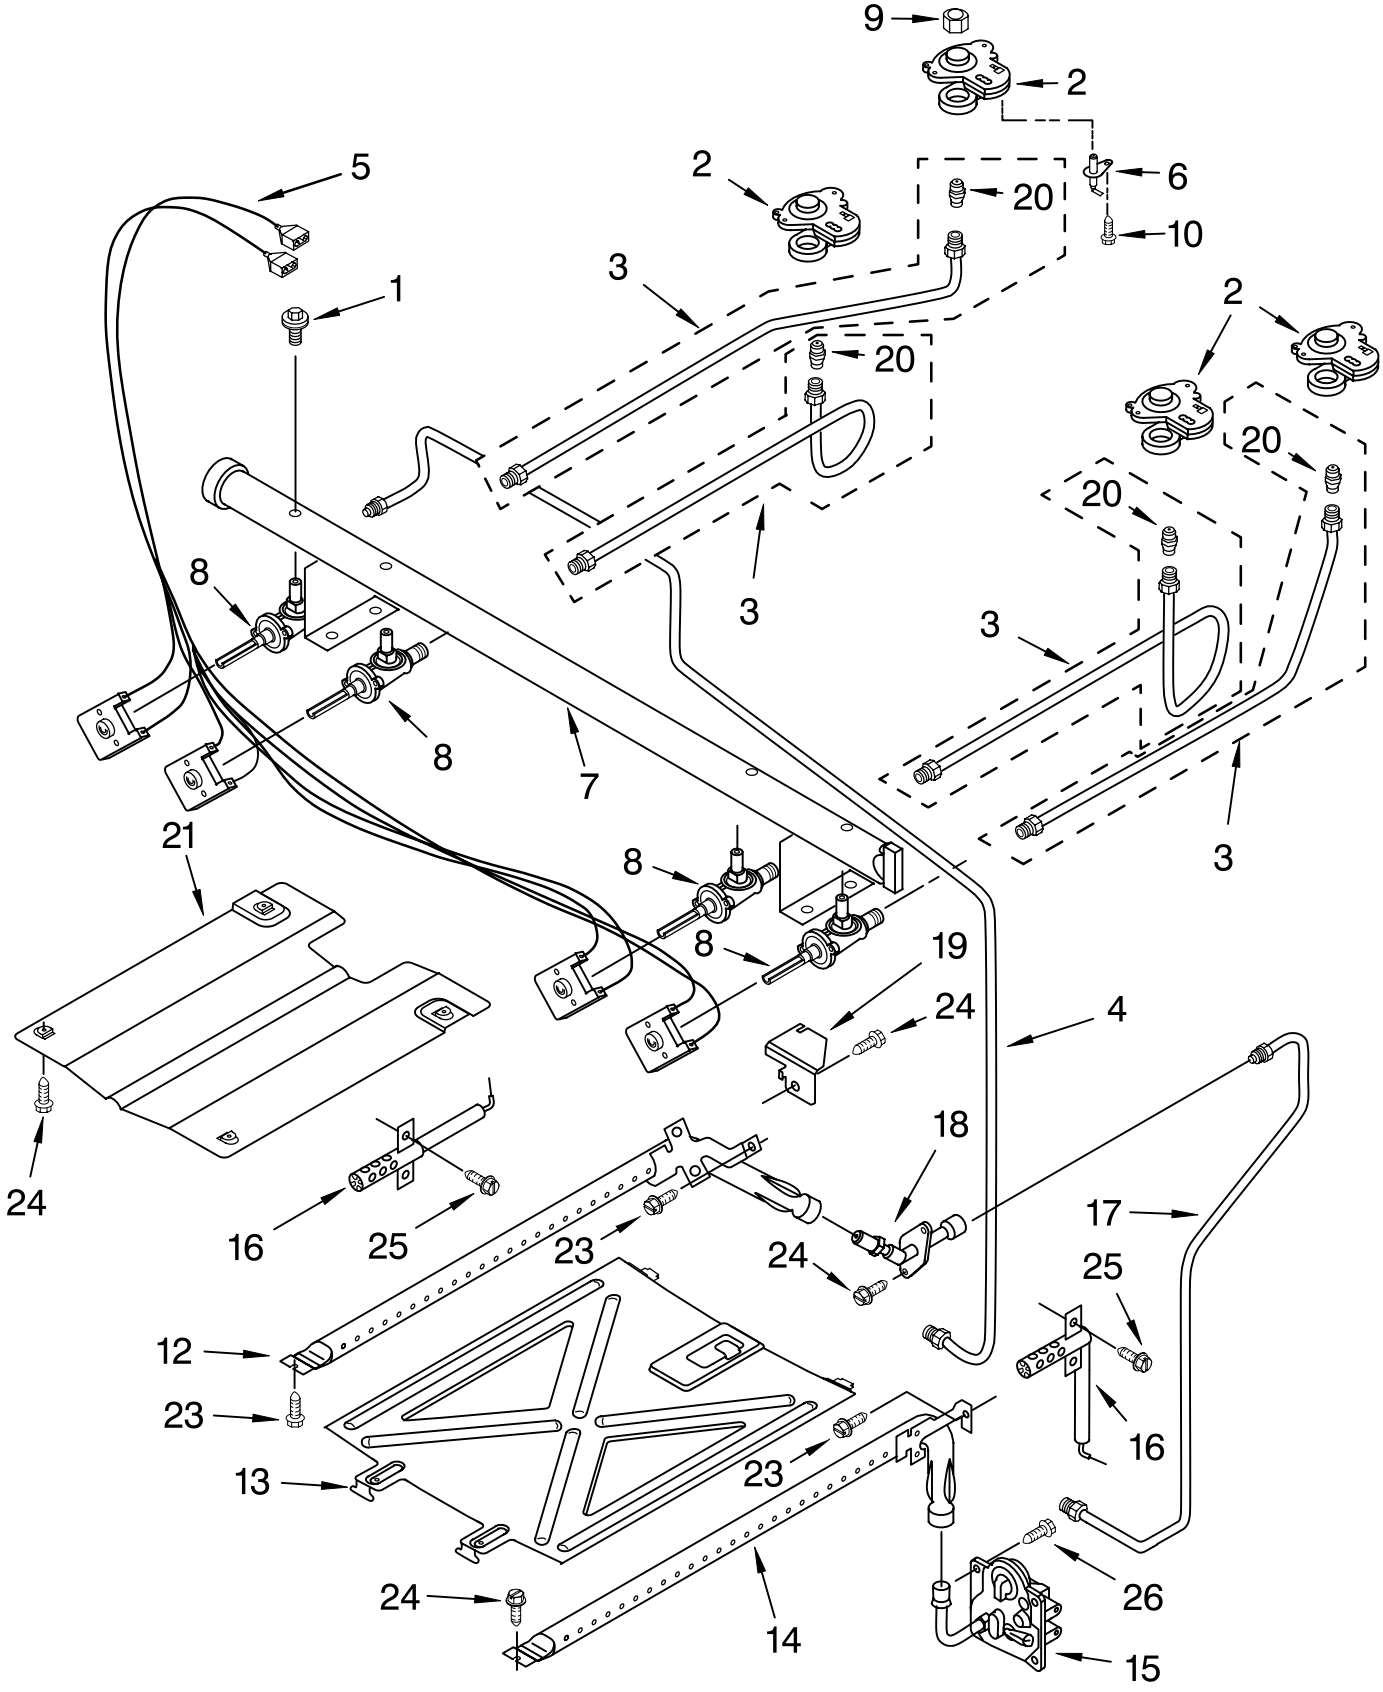

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Model: GS445LEMS4 (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8273096	Screw, Valve
2		Burner Base
	8273700	Large (4)
3		Tubing, Burner W/Orifice
	8273692	Left Front
	8273694	Left Rear
	8273695	Right Front
	8273697	Right Rear
4	8523402	Tubing (Manifold to Regulator)
5	8523406	Harness, Igniter (W/Switches)
6	8523793	Electrode (4)
7	8523407	Pipe, Manifold
8		Valve
	9757218	LF − RF − LR
	8273004	Right Rear
9	8273060	Nut (4)
10	8273062	Screw (4)
12	8054078	Burner, Broiler
13	8053970	Spreader, Flame (Oven)
14	9758078	Burner, Bake
15	9761959	Valve, Gas
16		Igniter
	8054129	Broil
	9758079	Bake
17	8272222	Tubing (Broiler Fitting To Valve)
18	3186489	Fitting, Broiler
19	8272403	Cover, Igniter
20		Orifice, Burner
	8273063	Left Front
	8273065	Right Front
	8273065	Left Rear
	8273067	Right Rear
21	8053262	Spreader, Flame (Broiler)
23	3196265	Screw
24	3196176	Screw
25	3196385	Screw
26	3400016	Screw

Following Parts Not Illustrated

	8523422	Spuds, LP Gas (Kit of 4)

CHASSIS PARTS

For Model: GS445LEMS4
(Black Stainless)

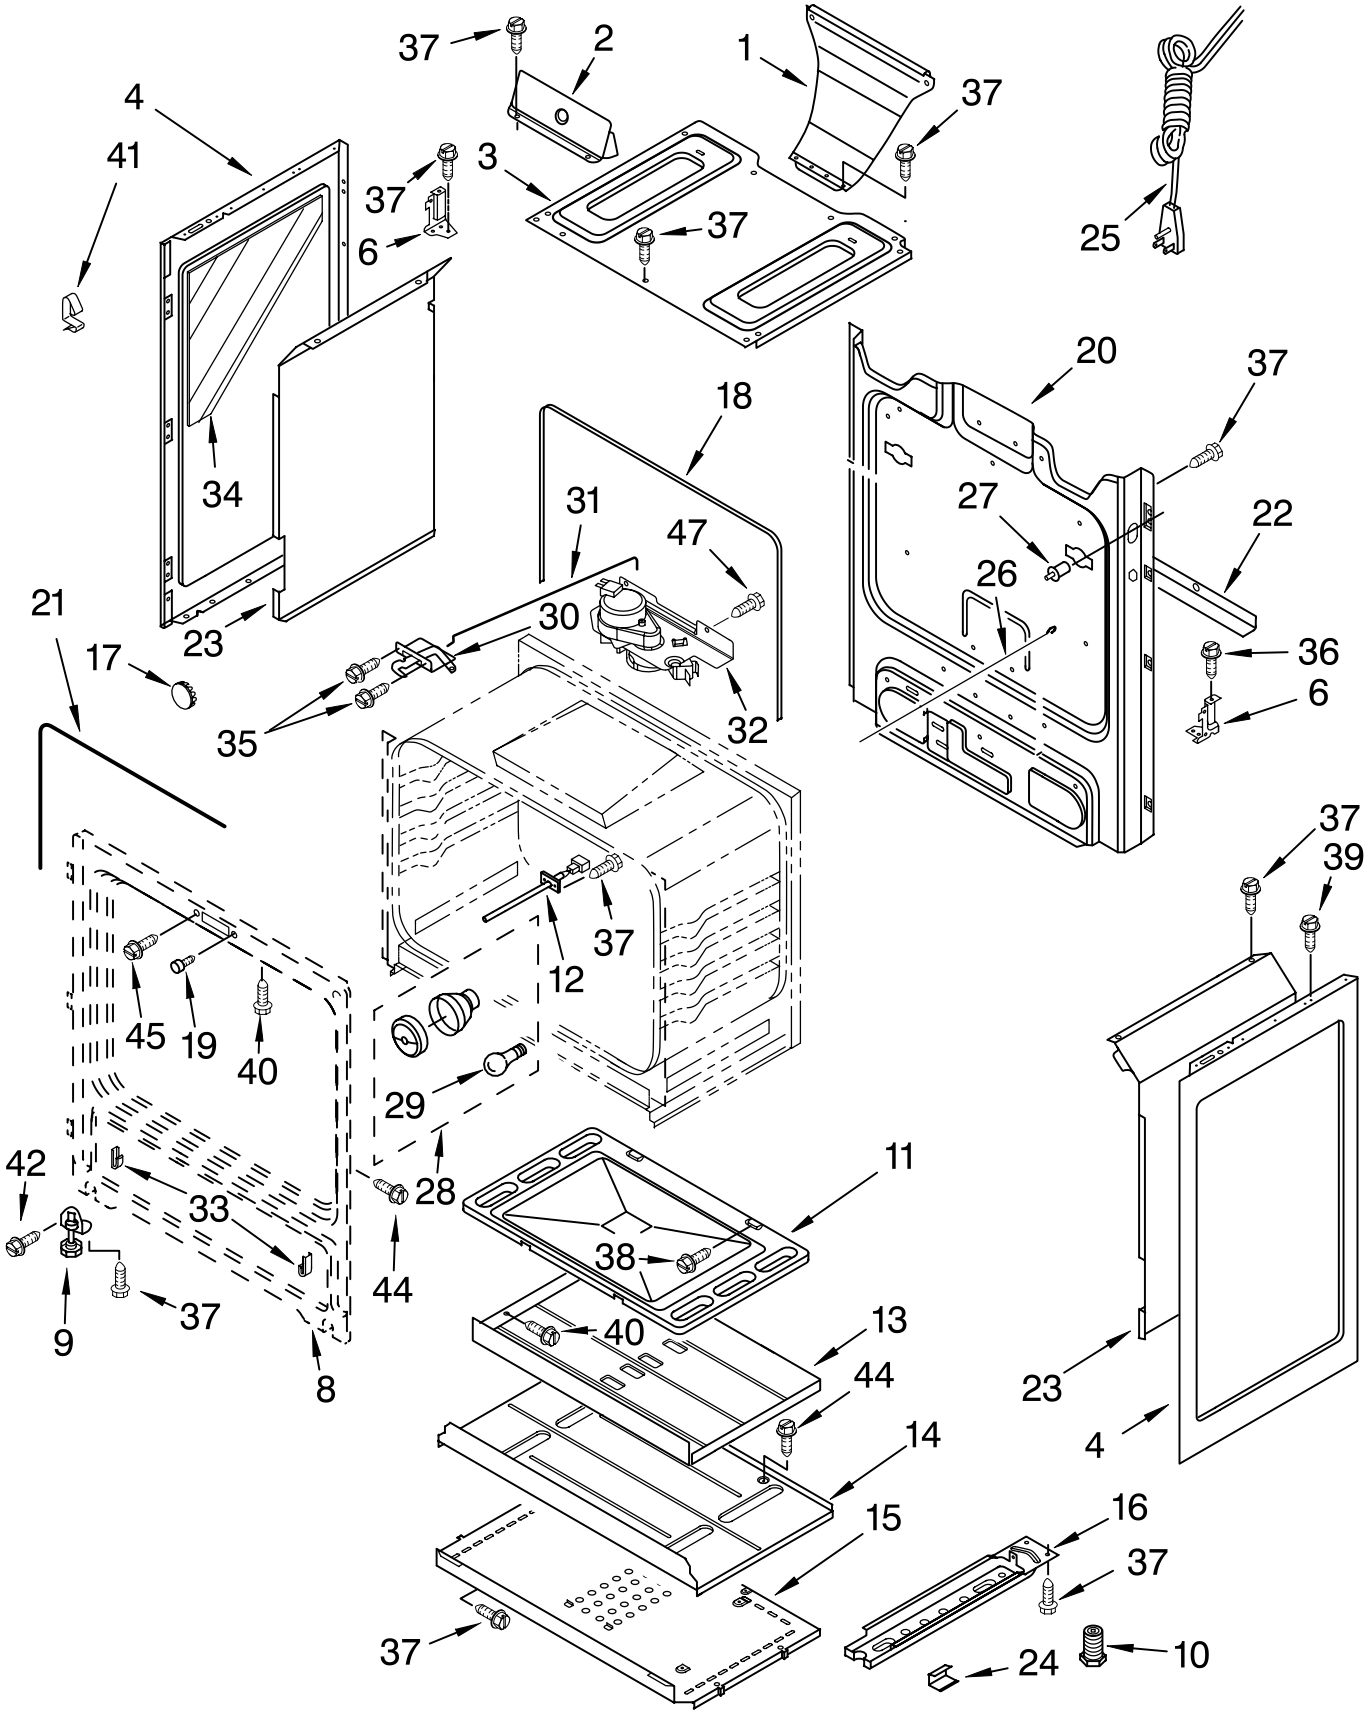

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Model: GS445LEMS4 (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8523263	Flue Box
2	8272747	Shield, Flue
3	8273036	Burner Box
4	8053832	Panel, Side (2)
6	8523249	Brkt, Manifold Mtg
8		Frame, Front (Not Serviced)
9	3196037	Foot, Front (2)
10	9761935	Foot, Rear (2)
11	3195097	Bottom, Oven
12	8273902	Sensor, Oven
13	8053967	Baffle, Burner
14	8053969	Shield, Heat
15	8053968	Shield, Lower
16	9760314	Rail, Base (2)
17	3196439	Button, Plug
18	8524109	Seal, Oven Flange
19	9758701	Spacer, Door
20	9757098	Back, Main
21	8522416	Seal, Oven
22	8053971	Brace, Main Back
23		Retainer, Insul.
	3196523	Left Hand
	3195726	Right Hand
24	3196576	Clip, Panel (6)
25	9757891	Cord, Power
26	9757239	Rod − Dr Switch
27	9757262	Switch, Door
28	3196701	Light Socket Assy
29	311255	Bulb, Oven Light
30	9761013	Latch, Door
31	3196960	Rod, Latch
32	9757241	Latch−Mtr
33	9759785	Glide, Drawer (2)
34	9761490	Insulation
35	3196560	Screw (2)
36	4449743	Screw
37	3196178	Screw
38	3196152	Screw
39	3196168	Screw
40	3196176	Screw
41	3195813	Clip, Insulation
42	3196179	Screw
44	3196177	Screw
45	3196168	Screw
47	3196160	Screw

INSULATION

	8524099	Insulation, Wrap
	8272614	Insulation, Back
	8272613	Insulation, Vent

DRAWER & BROILER PARTS

For Model: GS445LEMS4
(Black Stainless)

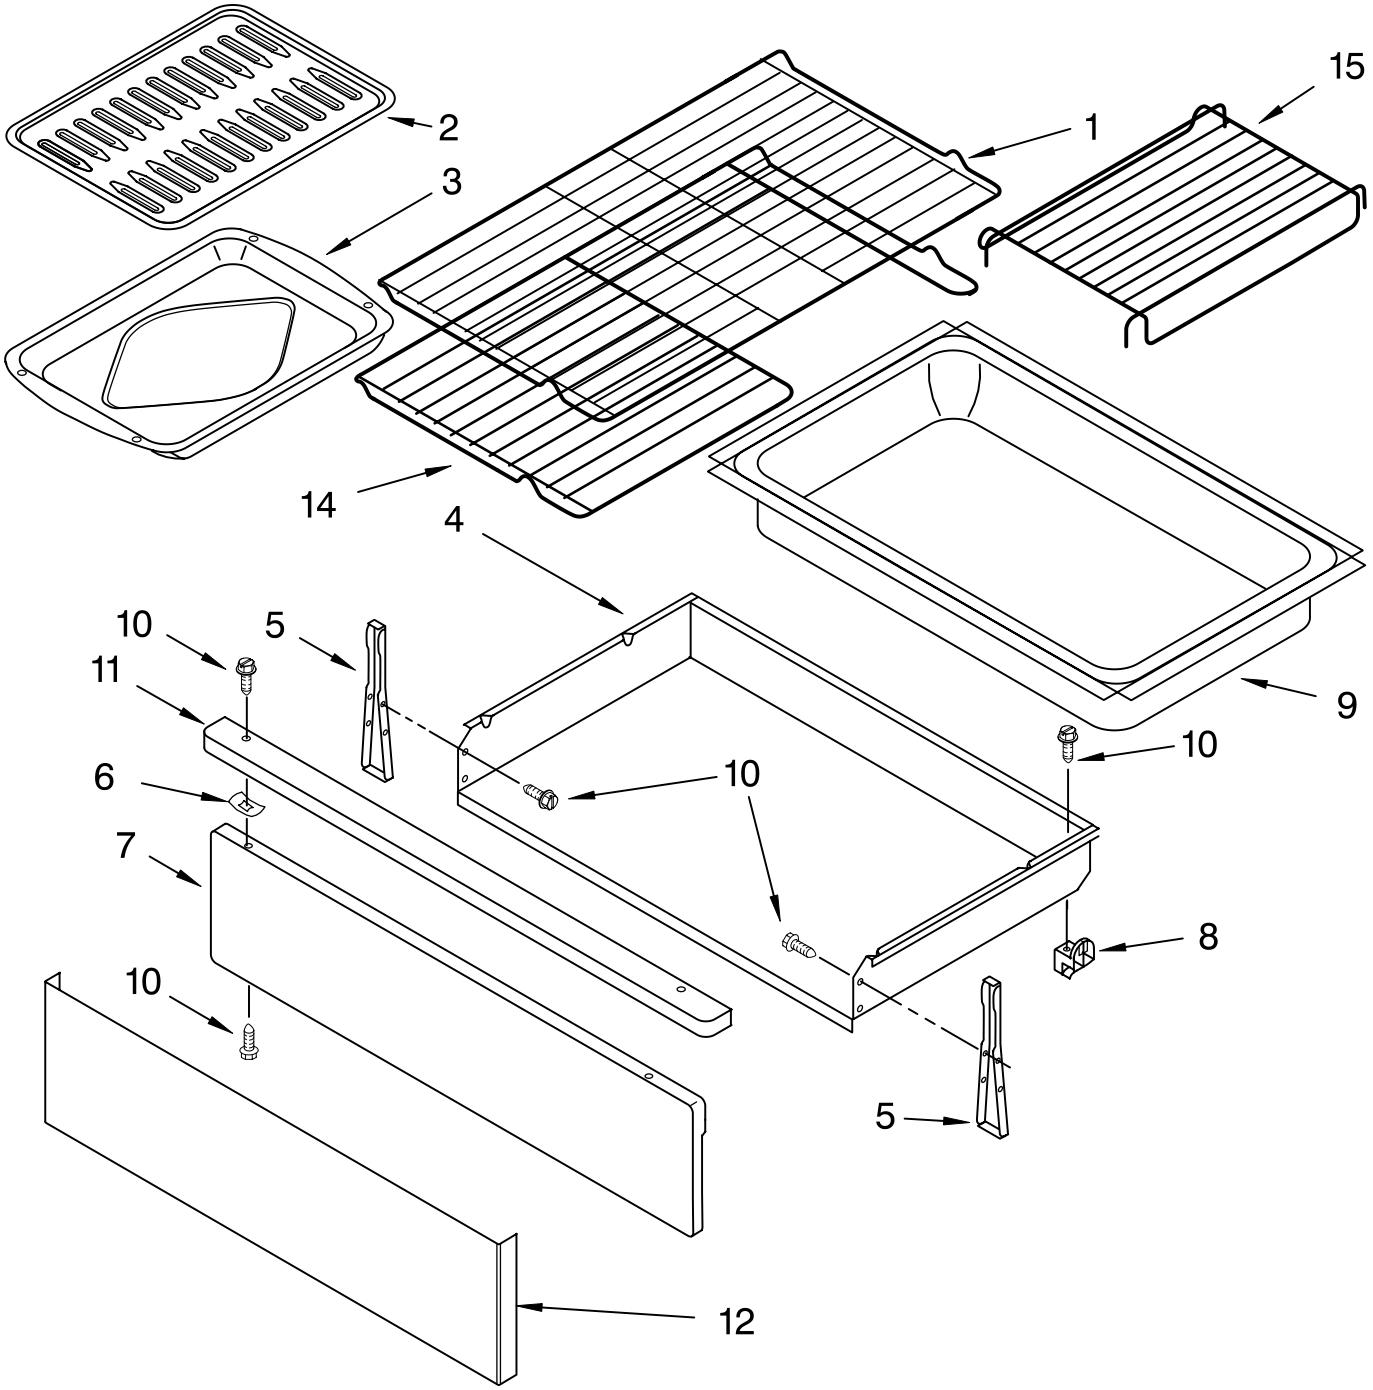

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	9761031	Drawer, Storage
5	3196817	Bracket, Drawer(2)
6	9781235	Clip, Speed
7		Panel, Drawer Frnt
	8053338	Black
8	8053334	Spacer, Glide
9	9761033	Drawer, Liner
10	3196168	Screw
11	9757237	Handle, Drawer
12	9755797	Panel, Stainless
14	8274021	Rack, Partial
15	8274022	Rack, Insert

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Model: GS445LEMS4
(Black Stainless)

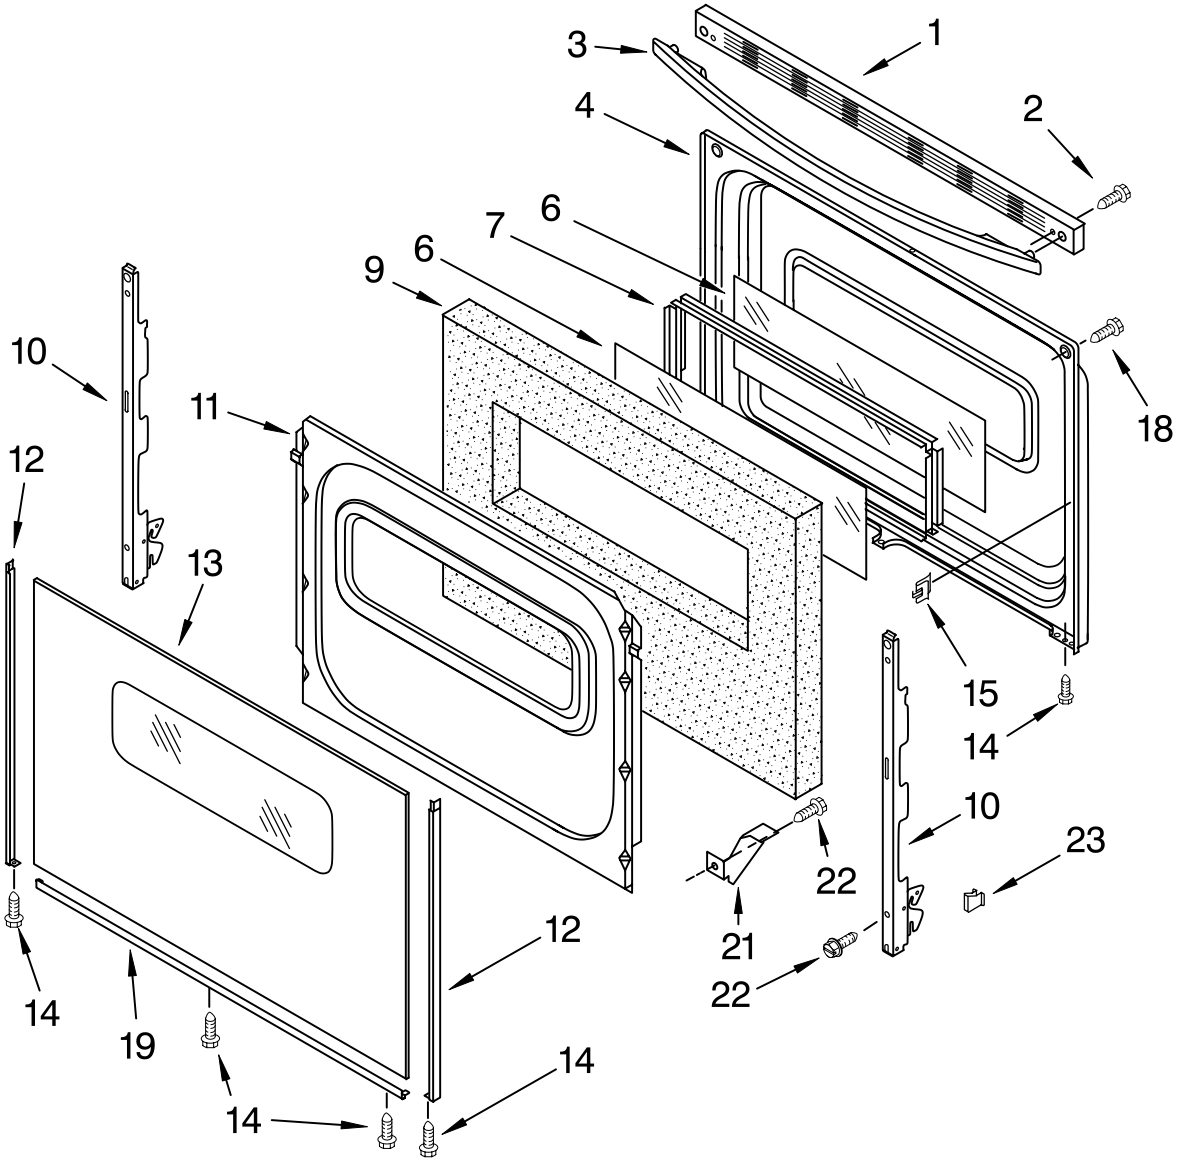

Illus. No.	Part No.	DESCRIPTION
1	8272243	Trim, Top
2	3196164	Screw
3	3195922	Handle, Door
4	3186292	Liner, Door
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
9	8272618	Insulation, Door
10	8272822	Hinge, Door
11	3186297	Retainer, Insul.
12		Trim, Door Side
	8523171	Left Hand
	8523165	Right Hand
13	9756435	Glass, Outer Door
14	3196160	Screw
15	3196025	Clip, Door Glass
18	3196161	Screw
19	8523180	Trim, Bottom
21	3196794	Bracket, Window
22	3196165	Screw
23	3196925	Clip, Door Stop(2)

OPTIONAL PARTS

For Model: GS445LEMS4
(Black Stainless)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')

ANTI−TIP KIT

9757976	Anti−Tip Kit

WIRING HARNESS PARTS

9758206	Harness, Main (Pyro)
8524207	Harness, Bake &
8523599	Harness, Wire (Cooktop Spark)
3196520	Clip, Wire
3196896	Clip, Wire
313438	Clip, Harness
3196696	Clip, Harness
3195927	Wire Tie (Insulation)

Miscellaneous

3196897	Pin Kit−Dr Removal